SVENSKA BADTUNNOR

Anslutnings manual

Connection manual

For English see page five

For more language:

Anslutningspaketet innehåller:

- 2st Plastanslutningar 50mm ink. Muttrar
- 2st O-ringar
- Hålsåg 64mm
- Hålsågshållare
- Anslutningsverktyg
- 4st Slangklämmor
- Har du beställt ett eluppvärmt bad så ingår även en grovsil i ditt anslutningspaket

---

Måttanvisning för placering:

Eluppvärmd terrasspool- övre anslutning 12 cm från sittytan, nedre anslutning 12 cm från golvet

Vedeldad terrasspool- Kaminen ska placeras i nivå brevid badet. Den övre anslutningen ska vara något lutad medan den nedre ska gå rakt. Se bilderna. En av anslutningarna levereras med ett monterat rostfritt rör. Denna anslutning ska monteras i det övre hålet i badet. Anslutningen utan järnrör monteras i det nedre hålet.

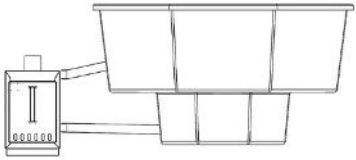

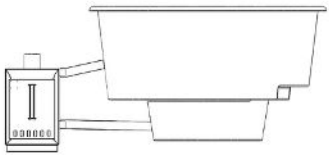

Läs igenom hela manualen innan du börjar.

Mät ut noga och dubbelkolla dina mått samt att hålsågen är diameter 64mm innan du borrar något hål.

Se gärna monteringsfilmen på våran youtubekanal

Montering av anslutningarna

1.Mät ut placeringen av anslutningarna. Den övre anslutningen skall vara på samma vägg som den undre anslutningen i vertikal linje med varandra.

Till Pacific rekommenderar vi att placeringen av anslutningarna är mitt på långsidan.

2.Montera hålsågen (64mm) i hålsågshållaren och borra hålen. Kontrollmät hålsågen även om den är stämplad med 64 mm.

3.Grada av hålen (se bild nedan) med ett gradverktyg. Det går även bra att grada med en kniv.

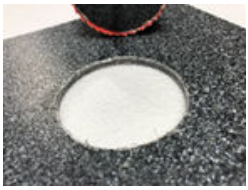

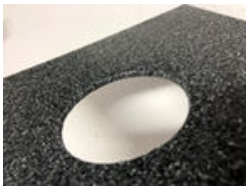

5.Montera silikonpackningen på anslutningen. Var noga med att packningen lägger sig ända längst ner.

6.Trä igenom anslutningen genom badets insats. Obs packningen skall vara på insidan av badet (samma sida som vattnet)
Skruva sedan på muttern på baksidan.

7.Dra åt muttern på baksidan med det medföljande verktyget. Dra inte för hårt då du kan ha sönder muttern. Går det trögt kan du smörja in muttern med lite diskmedel så ska det gå bättre.

7. Har du ett eluppvärmt bad? Montera grovsilen i den nedre anslutningen. Du behöver kontrollera så skruven i silen sitter fast och även efter dra den vid behov. Upplever du att silen sitter lite löst kan du bända metallflärparna lite utåt.

Se till att anslutningarna inte snurrar när du senare trär på slangen. Var försiktig så inte aslutningarna stöts i vid eventuella lyft av badet.
Silen är känslig för stötar och kan då ramla ur.

⚠

1.Läs anvisningarna noggrant före installation och användning påbörjas.
2.Svenska Badtunnor AB är inte ansvariga för att produkten inte fungerar eller skadas om anvisningar inte följs vid installation och användning.
3.Om inte Svenska Badtunnor AB skriftligen godkänt annat är reparation av produkten av andra än Svenska Badtunnor AB inte tillåten och garantin upphör att gälla. Vid sådan händelse hålls Svenska Badtunnor AB fri från all skuld i händelse av olycka.
4.Innan genomföring i badtunnan/terrasspoolen görs, säkerställ att rätt hålsåg används. Svenska Badtunnor AB är inte ansvariga för om fel hålsåg används vid håltagning. Endast 64mm hålsåg får användas.
Kontrollmät hålsågen med ett skjutmått innan borrning även om rätt mått är stämplat på hålsågen.
5.Efter installation kontrollera att inget vatten läcker vid anslutningen eller dess genomföring.

The connection package includes:

- 2 plastic connections 50mm inc. Nuts
- 2 O-rings
- Hole saw 64mm
- Hole saw holder
- Connection tool
- 4 hose clamps
- If you have ordered an electrically heated bath, a coarse strainer is also included in your connection package

---

Measurement instructions for placement:

Electric heated terrace pool - upper connection 12 cm from the seating surface, lower connection 12 cm from the floor

Wood-fired terrace pool - The stove must be placed level next to the pool. The upper connection should be slightly inclined while the lower one should go straight. See the pictures. One of the connections is delivered with a mounted stainless steel pipe. This connection should be installed in the upper hole of the tub. The connection without the steel pipe should be installed in the lower hole.

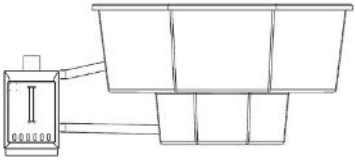

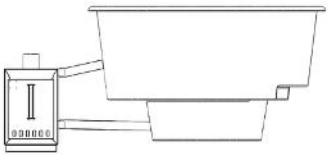

Please read the entire manual before starting.

Measure carefully and double check your measurements and that the hole saw is 64mm in diameter before you drill any holes.

Please watch the assembly video on our YouTube channel

Mounting the connections

1.Measure the location of the connections. The upper connection must be on the same wall as the lower connection in a vertical line with each other.

For Pacific we recommend that the placement of the connections is in the middle of the long side.

2. Mount the hole saw (64mm) in the hole saw holder and drill the holes. Check measure the hole saw even if it is stamped 64mm.

3.Grade the holes (see picture below) with a grading tool. It is also fine to sharpen with a knife.

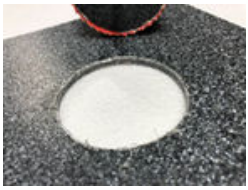

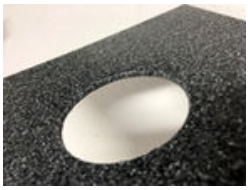

5.Install the silicone gasket on the connection. Be careful with the gasket laying at the very bottom.

6. Thread the connection through the insert of the bath. Note the gasket must be on the inside of the bath (same side as the water) Then screw on the nut on the back.

7.Tighten the nut on the back with the supplied tool. Do not pull too hard as you may break the nut. If it is slow, you can lubricate the nut with a little detergent and it should go better.

7. Do you have an electrically heated bath? Install the coarse strainer in the lower connection. You need to check that the screw in the strainer is tight and tighten it if necessary. If you find that the strainer is a little loose, you can bend the metal flanges a little, and it should fit better.

Make sure that the connections do not twist when you later thread the hose. Be careful not to bump the shaft connections when lifting the bath.
The strainer is sensitive to shocks and may fall out.

⚠
1.Read the instructions carefully before starting installation and use.
2. Svenska Badtunnor AB is not responsible for the product not working or being damaged if instructions are not followed during installation and use.
3. Unless otherwise approved in writing by Svenska Badtunnor AB, repair of the product by anyone other than Svenska Badtunnor AB is not permitted and the warranty ceases to apply. In such an event, Svenska Badtunnor AB is held free of all liability in the event of an accident.
4.Before making a hole in the hot tub/terrace pool, ensure that the correct hole saw is used. Svenska Badtunnor AB is not responsible for if the wrong hole saw is used when drilling holes. Only 64mm hole saws may be used. Check the hole saw with a caliper before drilling even if the correct measurement is stamped on the hole saw.
5.After installation, check that no water leaks at the connection or its penetration.

SVENSKA
BADTUNNOR

Frågor? Besök våran kundtjänst på
svenskabadtunnor.se

Questions? Visit our customer
service at svenskabadtunnor.se